


The following guide will show you how to remove the battery from a Toshiba Satellite M35X-S114.
The process is very simple and can be completed in seconds!

The image shows the underside of a black Toshiba laptop. Two hands are lifting the bottom cover, which has several labels. On the left, there is a large white regulatory label with FCC, CE, and RoHS markings. Next to it is a green warranty sticker from Toshiba. In the center, there is a small blue 'TOSHIBA' logo and a larger white label with recycling instructions: "CONTAINS NICKEL-CADMIUM BATTERY AND IS UNRECYCLABLE IN SOME AREAS. RECYCLE OR DISPOSED OF PROPERLY". A barcode is located near the hinge where the cover meets the laptop body.

INTRODUCTION

The battery replacement process involves flipping the laptop over, locating two switches, and pressing them in order to unlock the battery from its compartment. Once unlocked, the battery can be safely pulled out from the laptop. Replacing the battery may be necessary if your current battery is defective, or if the battery has become damaged and depletes too quickly. In most cases, a replacement battery can be acquired from the device's manufacturer.

Step 1 — Unlock the Battery from its Compartment

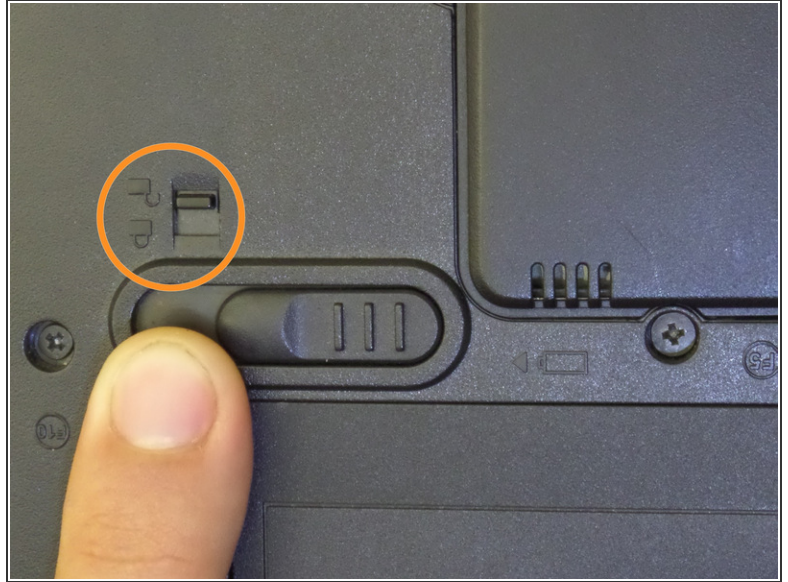


- Locate the battery near the bottom left-hand side of the device.
 - Locate the two switches above the battery's top left corner.
 - Use any finger to move the smaller switch above the battery to the unlock position.
- i** A small icon of a padlock will identify the "lock" and "unlock" positions of the switch.

Step 2 — Move the Battery's Release Switch



- Use any finger to move the larger switch above the battery to the left and hold the switch.

Step 3 — Remove the Battery

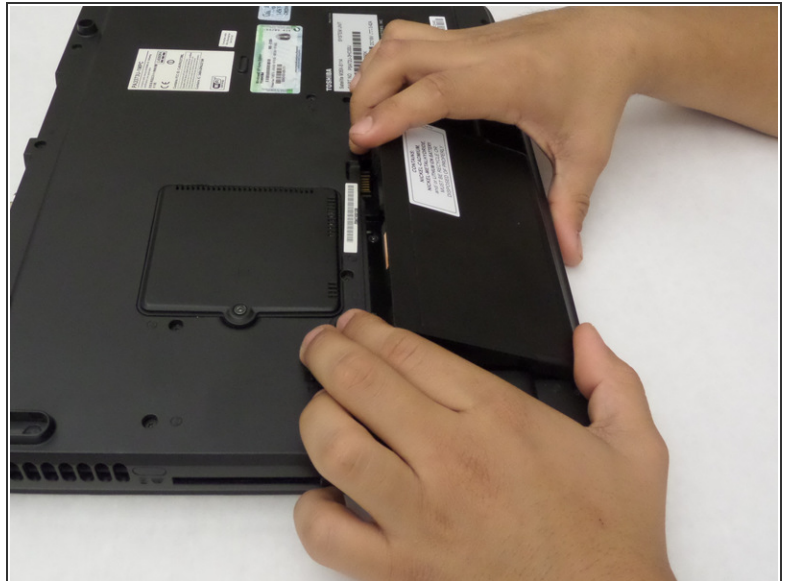

- Place your fingernail or fingertip into the groove near the top right of the battery.
- Pull the battery out with your finger. Release the larger switch once the battery is out.

To reassemble your device, follow these instructions in reverse order.

